

2016-FORKLIFT CONCRETE SKIP



The 2016 fork mounted concrete skip has been designed to meet a budget requirement for the delivery of concrete where transport is only available by forklift truck and tele-handler. This can be supplied with a tremmy hose adapter to aid placement of concrete if required

Item Code	Capacity (Its)	SWL (Kg)	Height (mm)	Width (mm)	Length (mm)	Weight (kg)
2016.5	350	800	650	1042	1110	150
2016.8	500	1200	730	1042	1110	170

Eichinger Equipment Ltd
69-73 James Road, Frimley, Camberley, GU15 2RH
T: 01276 605 970 F: 01276 682 913 E: sales@eichinger.co.uk

The following instructions must be read and understood by each intended user of this equipment; if there is anything you do not understand contact Eichinger Equipment Ltd.

Ensure the equipment is adequate for the job you need to carry out.

You must not operate this equipment if you are under the influence of alcohol, drugs or if you are feeling unwell.

A risk assessment should be carried out prior to moving or using this equipment.

The following PPE (Personal protective equipment) should be worn when using this equipment:

Gloves / Goggles / Hard Hat / Steel Toecap boots / Hi-Vis Vest

We also suggest suitable clothing should be worn.

Familiarise yourself with the equipment, its use and how it works!

As this equipment is used at multi-level, ensure the intended area for use is clear of overhead cables and power lines or similar hazards which may affect its safe use. This equipment must always be used in conjunction with your site safety policies.

The work area must be clear of obstructions with adequate space for the operative to work safely around the equipment.

Check and ensure the equipment is inspected and in a safe condition prior to its use. Also ensure that its load is stable and secure.

Set the forklift's forks to the appropriate width to suite the tipping skips fork pockets.

Approach the skip with the forklift and line the forks up with the fork pockets. The skip can be secured to the forklift by the restrain chain attached to the skip, you must ensure this is wrapped tightly around the carriage of the forklift as the chain is not designed to withstand impact loads.

Fill the skip with concrete as required ensuring not to overfill, proceed carefully to the required discharge area, the skip has a sloped floor so there is no need to tilt the forks downwards. You can now pull the gate lever to release the concrete as required.

When finished the skip should be returned for refilling or taken to a suitable area for a thorough clean, as with all concrete skips, failure to clean the skip after use will affect the performance and condition of the skip.

Once the skip has automatically returned to its locked position return the lever safety plate over the release lever ready for transit.

